


# INSTRUCTION SHEET

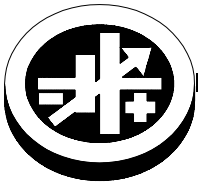

**KEPCO** An ISO 9001 Company.


**MA  
FAW/RTW  
150H**

## MOUNTING ADAPTER FAW/RTW 150H

**DESCRIPTION.** The Model MA FAW/RTW 150H Mounting Adapter includes an adapter plate and mounting screws that allow a 150W RTW power supply to be easily substituted for a horizontally-mounted 150W FAW power supply. Mount the adapter plate to the RTW power supply using the screws provided (see Figure 1), then install the adapter plate in place of the FAW power supply using the screws that previously secured the FAW power supply.

### NOTES:

1. MOUNT ADAPTER PLATE TO RTW POWER SUPPLY AT HOLES "A" USING TWO SCREWS AND SPACERS PROVIDED. SPACERS ARE NEEDED TO ENSURE MAX PENETRATION OF SCREWS DOES NOT EXCEED 0.24 IN. (6MM).
2. INSTALL ADAPTER PLATE WITH RTW POWER SUPPLY ATTACHED USING HARDWARE PREVIOUSLY USED TO MOUNT FAW POWER SUPPLY (NOT SUPPLIED).

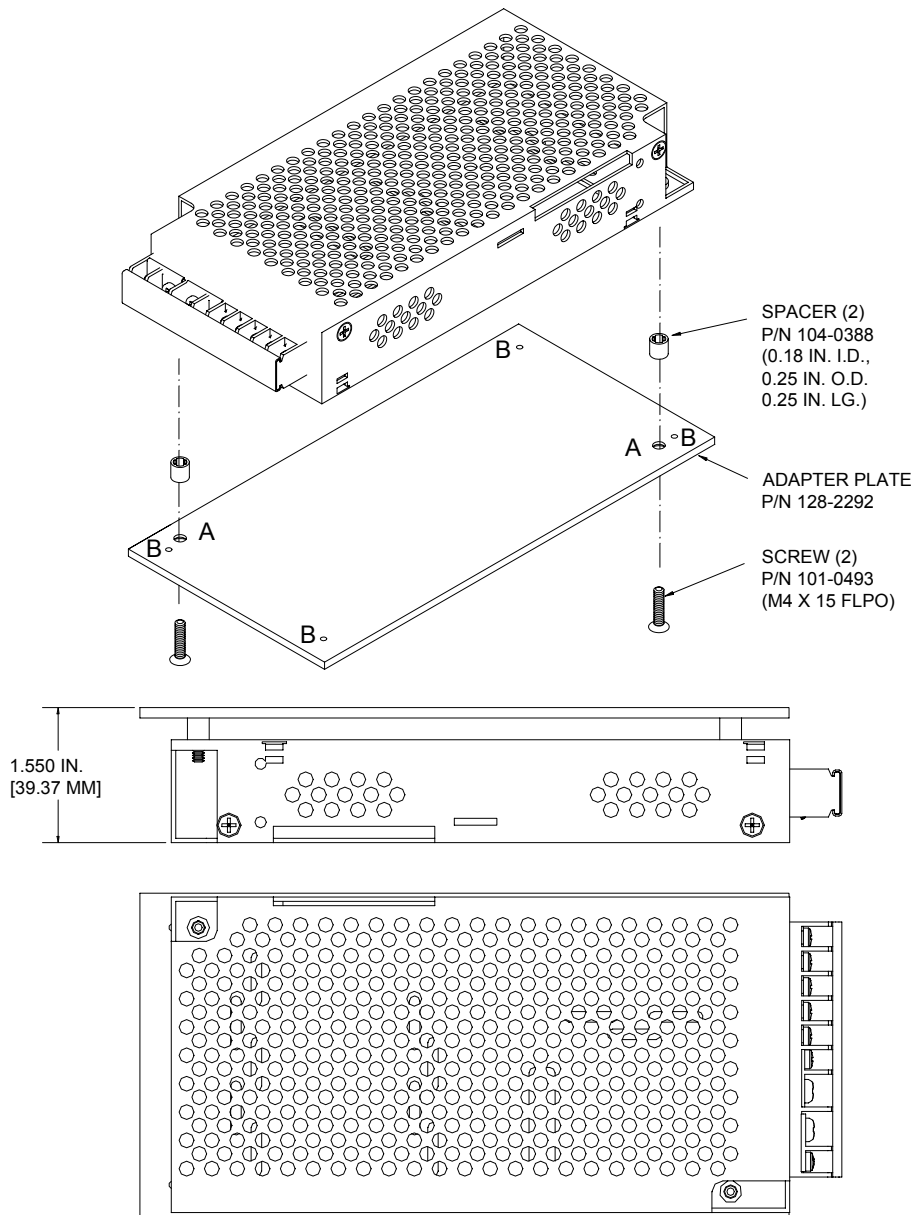

3043151

**FIGURE 1. ADAPTER PLATE INSTALLATION**

KEPCO, INC. ● 131-38 SANFORD AVENUE ● FLUSHING, NY. 11352 U.S.A. ● TEL (718) 461-7000 ● FAX (718) 767-1102  
<http://www.kepcopower.com> ● email: [hq@kepcopower.com](mailto:hq@kepcopower.com)