INSTRUCTION MANUAL



KEPCO An ISO 9001 Company.

KIT DIN RKW1500-L

DIN-RAIL MOUNTING KIT FOR SERIES RKW 1500W

DESCRIPTION. Kepco Kit, Model DIN RKW 1500-L contains a preassembled mounting plate and associated hardware used to install RKW 1500 Watt Series power supplies on a DIN rail. The "L" suffix is for mounting perpendicular to the long dimension (length) as shown in Figure 1. Outline dimensions are shown in Figure 4.

INSTALLATION.

1. INSTALLING KIT. Attach the preassembled mounting plate to the power supply using the hardware supplied (see Figure 3).

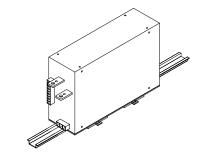


FIGURE 1. L SUFFIX ORIENTATION

3042669

2. **INSTALLING POWER SUPPLY ON DIN RAIL.** To mount the power supply on the rail insert one end of both clips under one edge of the rail, then snap the other end of the clips into place (see Figure 2A).


NOTE: For applications where the installed power supply may be subject to unusual levels of shock or vibration, or where the power supply is oriented such that it may slide down the rail due to gravity, the use of two DIN rail end stops (Kepco P/N 108-0367) is recommended. After installing the power supply on the rail, the end stops are installed by clearing the DIN rail of other components and sliding the end stops over the rail. When the end stops are secure against the power supply, tighten the two integral screws of each end stop.

3. WIRE POWER SUPPLY. Refer to RKW 1500W manual.

REMOVING POWER SUPPLY FROM DIN RAIL. While grasping the power supply with one hand, use a screwdriver to apply leverage towards the left as shown in Figure 3B to disengage both clips from the rail.

A - INSTALLATION



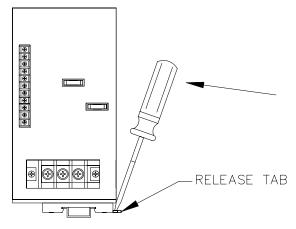

3042672

FIGURE 2. INSTALLATION AND REMOVAL OF POWER SUPPLY FROM DIN RAIL

KEPCO, INC. ■ 131-38 SANFORD AVENUE ■ FLUSHING, NY. 11352 U.S.A. ■ TEL (718) 461-7000 ■ FAX (718) 767-1102 http://www.kepcopower.com ■ email: hq@kepcopower.com

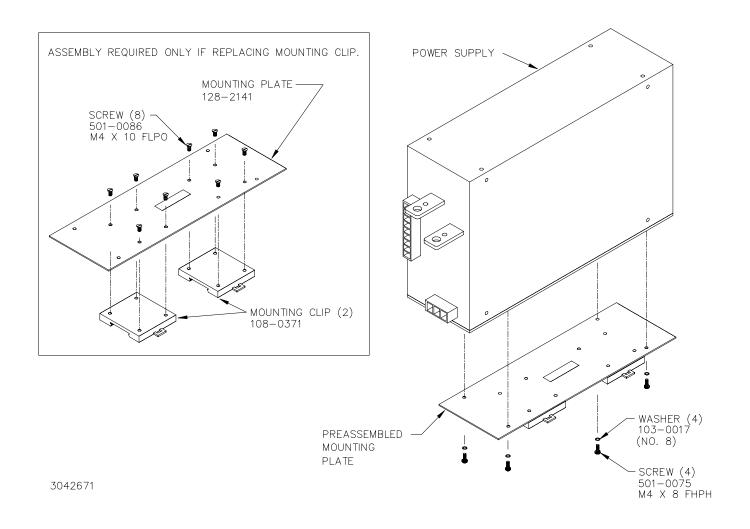


FIGURE 3. INSTALLATION OF KIT ON RKW 1500W POWER SUPPLY

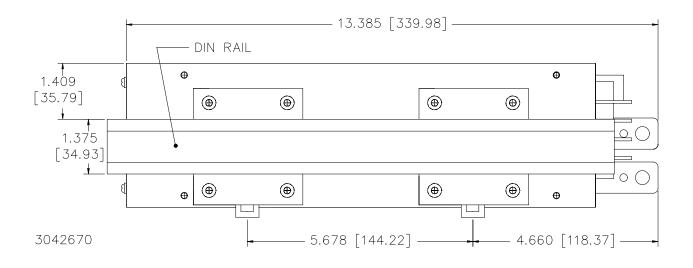


FIGURE 4. RKW 1500W POWER SUPPLY WITH KIT INSTALLED, OUTLINE DIMENSIONS