

#### **APPLICATION NOTE**

COTEK MODELS AE-800 AE-1500 AE-3000 AEK-3000 AE-3000HV

NOTE: The following appplication notes are for the Cotek models distibuted by Kepco, Inc. that are listed above.

1. RS 232 Communication is only possible using the CT Series adapters listed below. (Pins 23 and 24 of CN2 are not connected and do not function.) See CT Series User Guide (free download) for details.

www.kepcopower.com/support/opmanls.htm#ae

2. Computer control is also possible using the I<sup>2</sup>C interface. Refer to the Cotek I<sup>2</sup>C and RS 232/RS 485 Communication Protocol Manual (free download) for details.

www.kepcopower.com/support/opmanls.htm#ae

**CT-201** - Used to control a single power supply from a PC via RS 232. Includes one (1) CT Series cable (Cotek P/N 47-0124-0001) to connect CT-201 to power supply and one 5-pin connector (ECH350R-05P) used for remote sense connections. Requires RS 232 cable to connect CT-201 DB-9F connector to computer RS 232 port (not supplied). See CT Series User Guide for details.

CT-204 - Used to control up to four (4) power supplies configured in series from a PC via RS 232; maximum output voltage: <500V d-c. Includes four (4) CT Series cables (Cotek P/N 47-0124-0001) to connect CT-201 to power supplies. Optional 5-pin connector(s) (Dinkle P/N ECH350R-05P) used for remote sense connections are not supplied. Requires RS 232 cable to connect CT-201 DB-9F connector to computer RS 232 port (not supplied). See CT Series User Guide for details.

NOTE: More than four (4) power supplies may be connected in series and controlled via RS 232 by the use of multiple CT-204 modules and the optional CT-204 to CT-204 series cable (Cotek P/N 47-0103-0028); <500V d-c max still applies.

**CT-251** - Used to provide parallel control of multiple power supplies. Connecting a total of (N) power supplies in parallel requires (N-1) CT-251 modules plus one (1) CT-551 module which provides the RS 232/ PC communication path. Each CT-251 and CT-551 module requires a CT series cable to connect to the associated power supply (supplied). See CT Series User Guide for details.

**CT-551** - Used to provide parallel control of multiple power supplies. Connecting a total of (N) power supplies in parallel requires (N-1) CT-251 modules plus one (1) CT-551 module which provides the RS 232/ PC communication path. Each CT-251 and CT-551 module requires a CT series cable to connect to the associated power supply (supplied). See CT Series User Guide for details.



#### Features:

- Universal AC input / Full range
- Programmable output Voltage (0% ~ 105%)
- Programmable output Current (0% ~ 105%)
- **Built-in active PFC Function**
- Forced current sharing at parallel operation (Refer to pg. 5 for connection diagram)
- **Constant current limit**
- Selectable +5V / 0.5A or +9V / 0.3A auxiliary output
- Global control via RS232
- Remote setting multiple via RS232, RS485 & I2C
- **Power OK signal**
- Remote ON / OFF function
- Protection: OVP, OLP, OTP, SCP, Fan failure








	MODEL	AEK-3000-150	AEK-3000-200	AEK-3000-250	AEK-3000-300	AEK-3000-400		
	DC Voltage Rated	150V	200V	250V	300V	400V		
	Rated Current	20A	15A	12A	10A	7.5A		
	Current Range	0 ~ 20A	0 ~ 15A	0 ~ 12A	0 ~ 10A	0 ~ 7.5A		
	Rated Power	3000W						
	Ripple & Noise (Max.) Note	2 1500mVp-p	2000mVp-p	2500mVp-p	3000mVp-p	4000mVp-p		
Output	Voltage Adj. Range		ment by potentiometer.	(Via V-Adj from PSU fro	nt panel)			
•	Voltage Tolerance Note	,, ,		<u> </u>	-1			
	Current Tolerance	-	±3.0% réted output current of single unit)					
	Line Regulation	±1.0%	earront or enigie arm,					
	Load Regulation		±1.0%					
	Setup, Rise Time		1100ms, 350ms at full load					
	Hold Up Time (Typ.)	14ms / 230VAC at full load						
	V ( D			ting curve)				
lanut	Frequency Range	Note.4 90 ~ 264VAC, 127 ~ 370VDC (Refer to de-rating curve)						
	Power Factor (Typ.)		47 ~ 63Hz					
	Efficiency (Max.)		0.95 / 230VAC, 0.98 / 115VAC at full load					
Input	AC Current (Max.)	93%	DW\ 14.5Δ / 220\/ΔC /2	(000///)				
	Inrush Current (Typ.)		19.7A / 115VAC (2000W), 14.5A / 230VAC (3000W)					
	Leakage Current	33A / 115VAC, 65A / 230VAC						
	Leakage Current		< 3.5mA / 240VAC					
	Over Load	105% rated output power						
		• • • • • • • • • • • • • • • • • • • •	Protection type: Constant current limit					
Protection	Over Voltage	Variable OVP Refer to VCI VS OVP curve.(OVP Tolerance 7%)						
			, ,	eset AC power ON or in	•			
	Over Temperature			recovery after tempera	ture goes down			
	Auxiliary Power		A or +9V / 0.3A auxiliary	output				
	Remote ON / OFF Control By external switch							
Function	Power OK Signal	Open drain signal low when PSU turns on, Max. sink current: 20mA, Max. drain voltage: 40V.						
	Output Voltage Trim	Adjustment of output voltage is between 0 ~ 105% of rated output						
	Output Current Trim	Adjustment of output current is between 0 ~ 105% of rated output						
		Note.5 Please refer to page 5						
	Working Temp.	-20 ~ +60°C (Refer to	o de-rating curve)					
	Working Humidity	20 ~ 90% RH non-condensing						
Environment	Storage Temp. & Humidity	-40 ~ +85°C, 10 ~ 95	-40 ~ +85°C, 10 ~ 95% RH					
	Temp. Coefficient	±0.02% / °C (0 ~ 50°C)						
	Vibration	10 ~ 500Hz, 2G 10min	n. / 1cycle, period for 60mi	n. each along X, Y, Z axes	Compliance to IEC 60068	3-2-6, IEC 60068-2-64		
	Safety Standards	Certified EN 62368-1	; UL62368-1					
		7 I/P-O/P:3KVAC(4242	VDC),I/P-FG:1.5KVAC(	2121VDC),O/P-FG:0.5K	VAC(707VDC)			
Safaty 9 EMA	Isolation Resistance	I/P-O/P, I/P-FG, O/P-	FG: 100M Ohms / 500V	DC (25°C/70% )				
Safety & EMC	EMI Conduction Radiation	Certified EN 55032						
	Power Harmonic & Voltage Fluctuation and Flicker	Certified EN 61000-3	3-2; EN 61000-3-3					
	EMS Immunity	Certified EN 55024; I	EC 61000-4-2,3,4,5,6,8	,11				
	Cooling	Load and temperatur	e control fan					
Others	Dimension (WxHxD)	170x64x280 mm / 6.0						
	Packing	3.3kg; 6pcs / 22.7kg						
Note	1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.  2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uF & 47uF parallel capacitor.  3. Tolerance: includes setup time tolerance, line regulation and load regulation.  4. De-rating may apply in low input voltage. Please check the de-rating curve for more details.  5. In parallel connection only one unit will operate if the total output load is less than 5% of the rated power.  6. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it still meets EMC directives.  7. This test is done without enclosure: I/P-O/P 4242VDC. If with enclosure: I/P-O/P 2121VDC,I/P-FG:2121VDC, O/P-FG: 707VDC							



#### **Mechanical Drawings:**

Unit:mm / inch

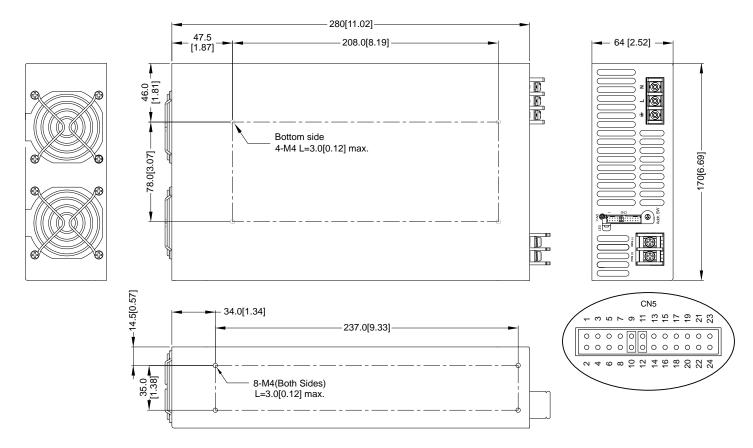

Recommended screw length is measured from the power supply surface

AC Input Terminal Pin No. Assignment

Pin No.	Assignment
L	ACL
N	ACN
÷	÷

Control pin number assignment (CN5): JST S24B-PHDSS or equivalent

Pin No.	Assignment	Pin No.	Assignment	Pin No.	Assignment	Mating Housing / Contact	
1	NC.	9	EN-	17	AUX		
2	NC.	10	GND	18	GND		
3	NC.	11	EN+	19	SCL		
4	NC.	12	AUX	20	SDA		JST SPHD-002T-P0.5
5	POK	13	ACI	21	AUX	or equivalent	or equivalent
6	GND	14	GND	22	GND		
7	PAR	15	VCI	23	RX		
8	VSET	16	GND	24	TX		

## **CN5 Function Description:**

Pin No.	Function	Description	Pin No.	Function	Description
1	NC.		13	ACI	I Program
2	NC.		14	GND	Ground
3	NC.		15	VCI	V Program
4	NC.		16	GND	Ground
5	POK	Power OK	17	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power
6	GND	Ground	18	GND	Ground
7	PAR	Parallel operation current share	19	SCL	Serial Clock used in the I <sup>2</sup> C interface
8	VSET	Aux output setting	20	SDA	Serial Data used in the I <sup>2</sup> C interface
9	EN-	Inhibit ON/OFF (-)	21	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power
10	GND	Ground	22	GND	Ground
11	EN+	Inhibit ON/OFF (+)	23	RX	For RS232 Receiver function
12	AUX	+5V / 0.5A or +9V / 0.3A Auxiliary power	24	TX	For RS232 Transmission function





#### **LED Status:**

LED	LED Signal	Status	
Solid(Green)		Power OK (Local mode)	
Solid(Orange)		Power OK (Remote mode)	
Slow Blink(Green)		Power Standby	
Fast Blink(Red)		Over Voltage Protection ( OVP )	
Solid(Red)		Over Load Protection ( OLP )	
Slow Blink(Red)		Over Temperature Protection ( OTP )	
Intermittent Blink(Red)		Fan Failure	
Interlace Blink(Red)		Power Failure	


<sup>\*</sup>Local mode: Use ACI/VCI control output current and voltage. Remote mode: Use RS-232 or I<sup>2</sup>C command control output current and voltage.

#### De-rating Curve:

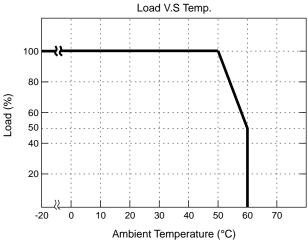


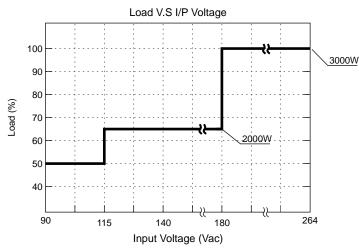


# **CMD VS Output Curve:**

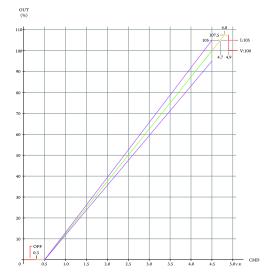

#### **VCI VS OVP Curve:**

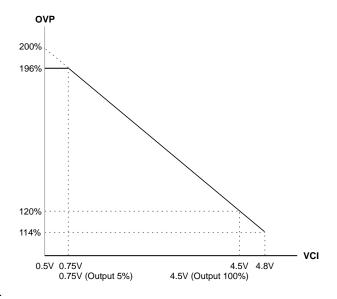


To ensure the power supply output voltage and current could be accurately adjusted, please make sure to adjust the output voltage and current > 10% vs. the rated voltage and current. (e.g. for a 300V unit, please adjust the DC output voltage above 30V to ensure accuracy; same applies to the output current)

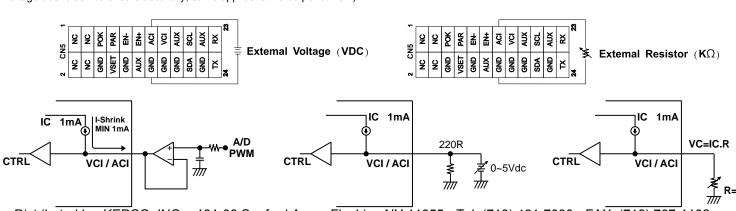

Distributed by: KEPCO, INC. • 131-38 Sanford Ave. • Flushing NY 11355 • Tel: (718) 461-7000 • FAX: (718) 767-1102 Email: hq@kepcopower.com • www.kepcopower.com



#### Remote ON/OFF:

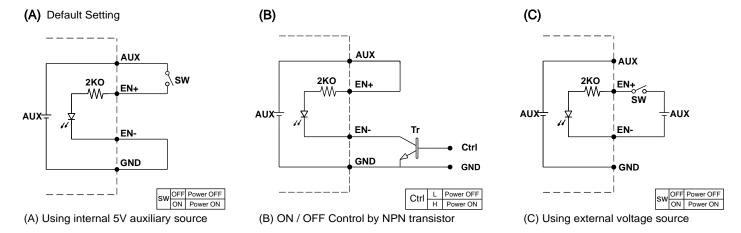


<sup>\*</sup>GND shown in above diagram is referring to the GND of CN2, not the Grounding from main power(NEG-).\*


# **Power OK Signal & Auxiliary Power Setting:**

\*The grounding of "AUX" power and P.OK signal should be connected to "GND" port. If " VO-" is connected as Grounding, make sure to short the GND and VO- ports.

Open drain signal low when PSU turns on, Max. P.OK sink current: 20mA, Max. drain voltage: 40V.

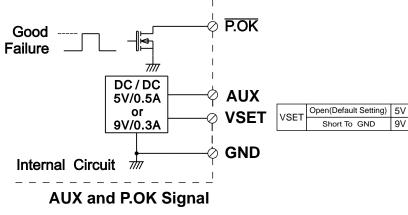

\*Place an additional capacitor to have a better performance of auxiliary power operation.

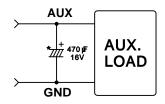


Do NOT exceed 5V/0.5A or 9V/0.3A

<sup>\*</sup>GND shown in above diagram is referring to the GND of CN2, not the Grounding from main power(NEG-).\*



#### 1. Current Sharing

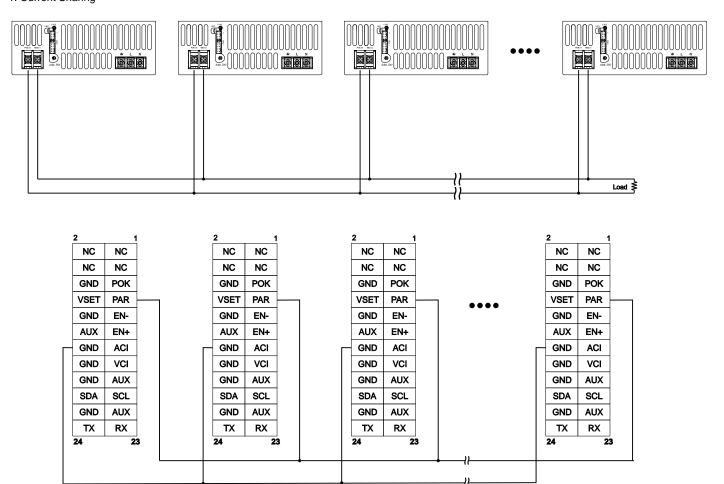


Please connect PAR pins together for current sharing function For Series connection, make sure to isolate CN2 control signals



## **Installation Instruction:**

- 1. Mounting Directions
  - 1-1 Recommended standard mounting methods :

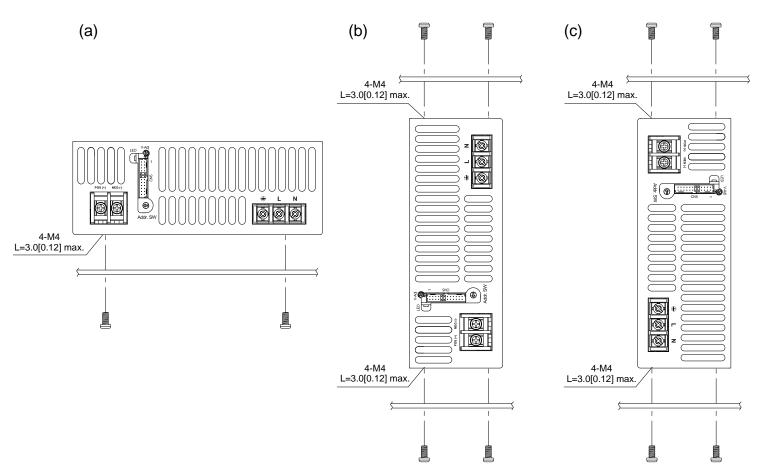

Recommended screw length is measured from the power supply surface

#### 2. Mounting Method

- 2-1 There are ventilating holes on the front and back side panels, do not obstruct; allow 50mm at least for air flow.
- 2-2 The Maximum allowable penetration of screw is 3mm. Incomplete threading should not be penetrated .
- 2-3 Recommended the torque of mounting screw: M4 screw: 1.27N • m (13.0kgf • cm)

